

### ASENNUS

Palo-oven karmi kiinnitetään seinärakenteeseen vähintään 6\*80 mm teräsruuveilla.

Kiinnityskohtien lukumäärä ja sijainti kuvien mukaan.

Oven karmin ja sitä ympäröivän rakenteen välinen rako tiivistetään sullomalla huolellisesti palamattomalla A2-S1, d0 -luokan vaatimukset täyttävällä kivivillalla. Tiivistyksessä voidaan käyttää myös palonkestävää palokatkovaahtoa (esim. Würth Sealfire W300/W350 tai Profipur Fire CE).

Asennusaukko saa olla enintään 30 mm karmin ulkomittoja suurempi.

Kivivillalla tiivistetyn tilkeraon pinnat voidaan viimeistellä palonkestävällä saumamassalla, kuten Sealfire W100 CE Paloakryyli (ETA-13/0070 ja ETA-13/0071).

### MOUNTING


The frame should be fixed into the wall construction with steel screws 6\*80 (minimum).

The amount of the screws and the fixing places should be done according to the pictures.

The gap between the door frame and the wall construction should be sealed carefully with nonflammable A2-S1, d0-classified mineral wool. The gaps can also be tightened with PU firefoam (f.ex. Würth Sealfire W300/W350 or Profipur Fire CE).

The mounting gap must be less than 30 mm bigger than the dimensions of the door frame.

The surfaces of the mounting gap sealed with mineral wool can be finished with fireproof joint paste Sealfire W100 CE Paloakryyli (ETA-13/0070 ja ETA-13/0071).

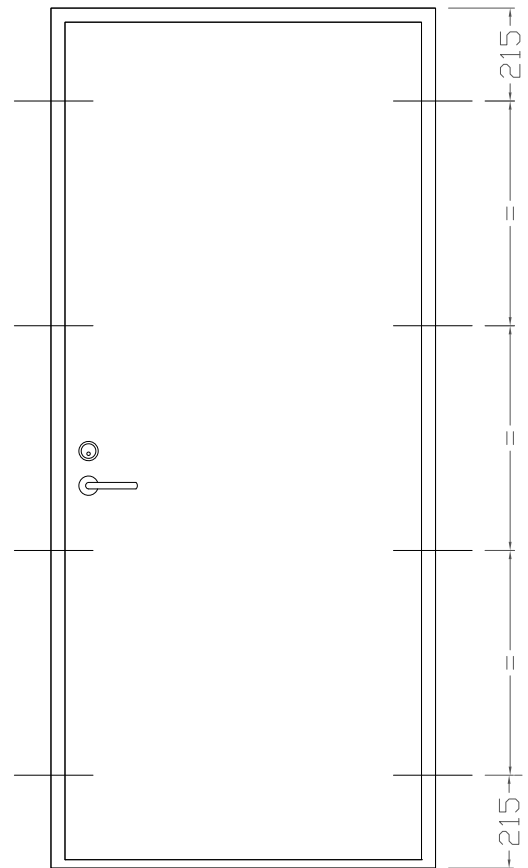

Kiinnitysruiden määrä ja paikat.

The amount of the screws and the fixing places should be done according to the pictures.

